


24 : Chassis Intrusion Header 1  
 25 : Chassis Intrusion Header 2

 


26 : Front Panel Audio Header

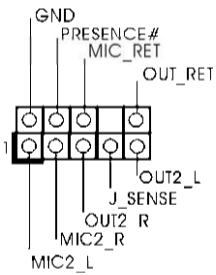


27 : Audio Jacks  
 Blue - Line In  
 Green - Line Out  
 Pink - Mic In

28 : Clear CMOS Header  
 1-2: Normal  
 2-3: Clear CMOS




29 : Top : RJ45 LAN Port  
 Bottom : USB2.0 (USB4\_5)

 30 : 4-Pin Chassis FAN Connector (+12V)



31 : Top : USB2.0 (USB2\_3)  
 Bottom : HDMI

 32 : 3-Pin Chassis FAN Connector (+12V)



33 : USB3.0 (USB0\_1)

34 : Top : COM2\*  
 Bottom : VGA1

35 : Top : COM1\*  
 Bottom left: Display1  
 Bottom right: PS/2 Keyboard/Mouse (Y Cable)

\* This motherboard supports RS232/422/485 on COM1, 2 ports. Please refer to below table for the pin definition. In addition, COM1, 2 ports (RS232/422/485) can be adjusted in BIOS setup utility > Advanced Screen > Super IO Configuration. You may refer to page 30 of our user manual for details.

COM1, 2 Port Pin Definition

PIN	RS232	RS422	RS485
1	DCD, Data Carrier Detect	TX-	RTX-
2	RXD, Receive Data	RX+	N/A
3	TXD, Transmit Data	TX+	RTX+
4	DTR, Data Terminal Ready	RX-	N/A
5	GND	GND	GND
6	DSR, Data Set Ready	N/A	N/A
7	RTS, Request To Send	N/A	N/A
8	CTS, Clear To Send	N/A	N/A
9	No Power/5V/12V	N/A	N/A