
 


21 : Front Panel Audio Header

 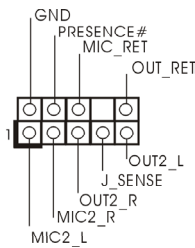


22 : SPDIF Header



23 : PWR LOSS Header (PWR_LOSS1)

Short : Power Loss
Close : no Power Loss



24 : Buzzer (BUZZ2)




26 : Audio Jacks
Blue - Line In
Green - Line Out
Pink - Mic In

27 : LAN2 Speed LED Header (LAN_LED4), LAN2 ACT/LINK LED Header (LAN_LED3)



**28 : Top : RJ45 LAN Port (LAN2)
Bottom : USB 3.0 Ports (USB3_3_4)**

29 : Chassis FAN Connector (+12V)

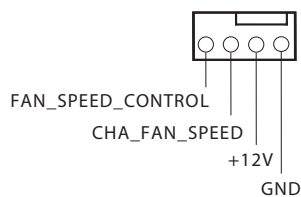

**30 : USB 3.0 Ports (USB3_1_2)
32 : Top : COM Port (COM2) (RS232)
Bottom : VGA Port (VGA1)**

33 : PS2 Power Setting Jumper (PS2_PWR1 (For PS2 Keyboard/Mouse))
1-2 : +5V
2-3 : +5VSB

**35 : Top : COM Port (COM1) (RS232/422/485)*
Bottom Right : PS/2 Keyboard/Mouse Port**

* This motherboard supports RS232/422/485 on COM1 port. Please refer to below table for the pin definition. In addition, COM1 port (RS232/422/485) can be adjusted in BIOS setup utility > Advanced Screen > Super IO Configuration. You may refer to our user manual for details.

COM1 Port Pin Definition

PIN	RS232	RS422	RS485
1	DCD, Data Carrier Detect	TX-	RTX-
2	RXD, Receive Data	RX+	N/A
3	TXD, Transmit Data	TX+	RTX+
4	DTR, Data Terminal Ready	RX-	N/A
5	GND	GND	GND
6	DSR, Data Set Ready	N/A	N/A
7	RTS, Request To Send	N/A	N/A
8	CTS, Clear To Send	N/A	N/A
9	No Power/5V/12V	N/A	N/A

36 : DisplayPorts (DP1)