



*the best regional partners*

# **E220 Jumper setting guide**


**Garcia.Huang  
2013/11/**

# E220 Board view



# E220 Board view

COM Port2

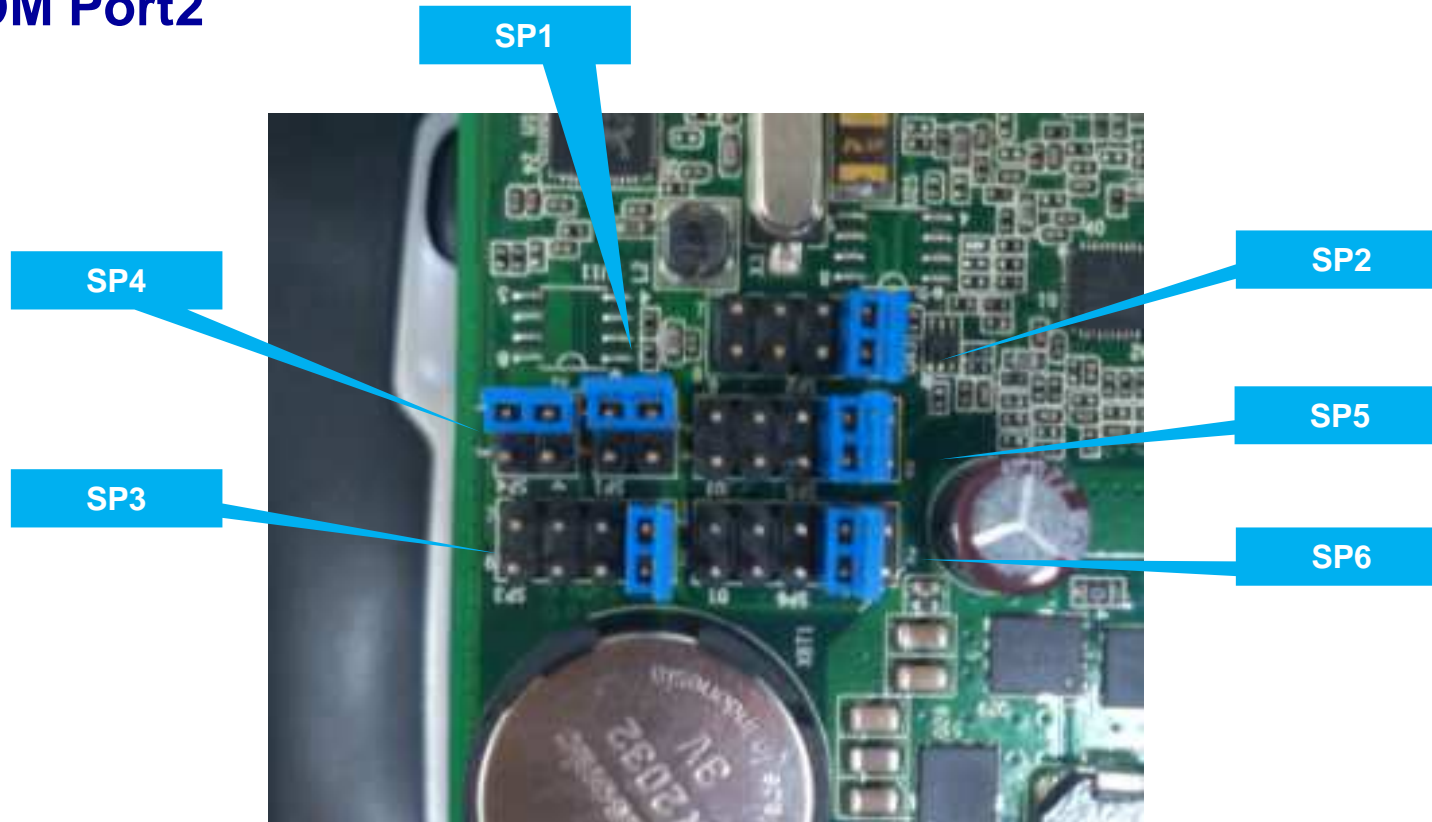



## COM Port2 setting

PIN	COM2 (Default)	COM2 (User define)
1-SP1	DCD(1-2)	DCD(1-2) / +5V(3-4)
2-SP2	RXD(1-2)	RXD(1-2) / TXD(3-4) / RXD(TTL)(5-6) / TXD(TTL)(7-8)
3-SP3	TXD(1-2)	TXD(1-2) / RXD(3-4) / TXD(TTL)(5-6) / RXD(TTL)(7-8)
4-SP4	DTR(1-2)	DTR(1-2) / +5V(3-4)
5	GND	GND
6	DSR	DSR
7	RTS	RTS
8-SP5	CTS(3-4)	RXD(TTL)(1-2) / CTS(3-4) / RXD(5-6) / TXD(7-8) / TXD(TTL)(7-8)
9-SP6	RI(3-4)	TXD(TTL)(1-2) / RI(3-4) / TXD(5-6) / RXD(7-8) / RXD(TTL)(7-8)

# E220 Board view

**MSATA**


**MiniPCle**

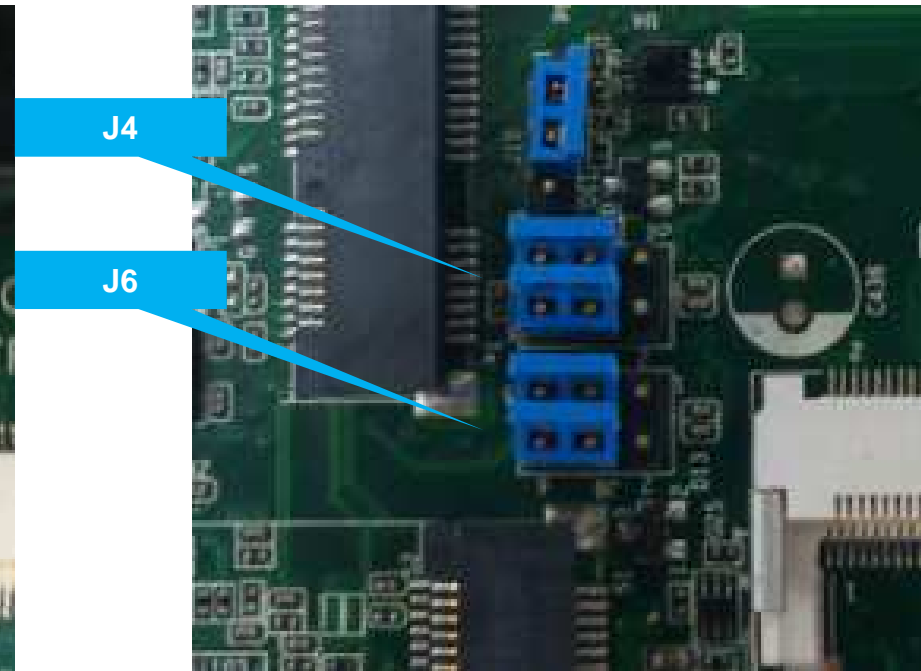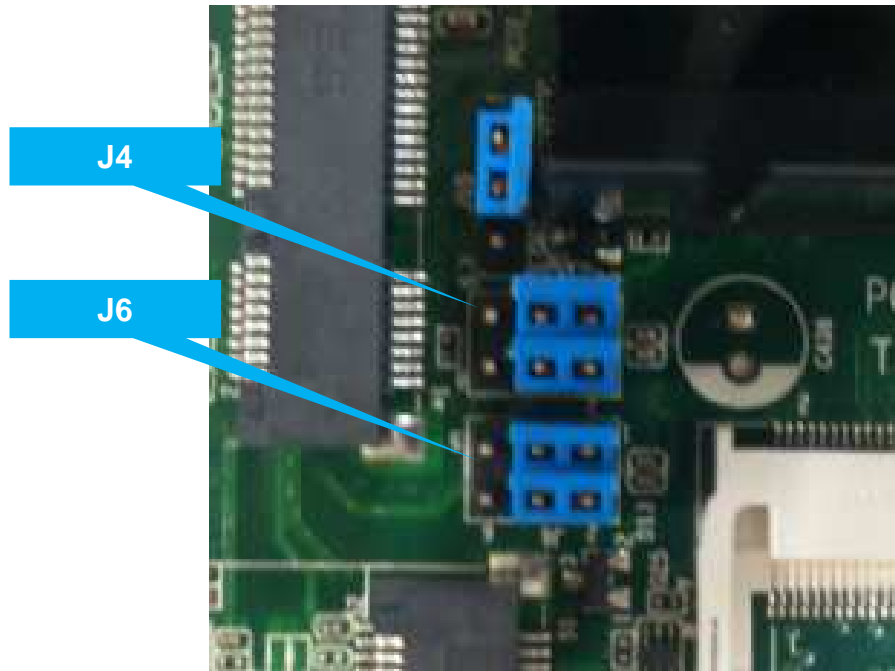




# E220 Board view

**CMOS clear (J7)**

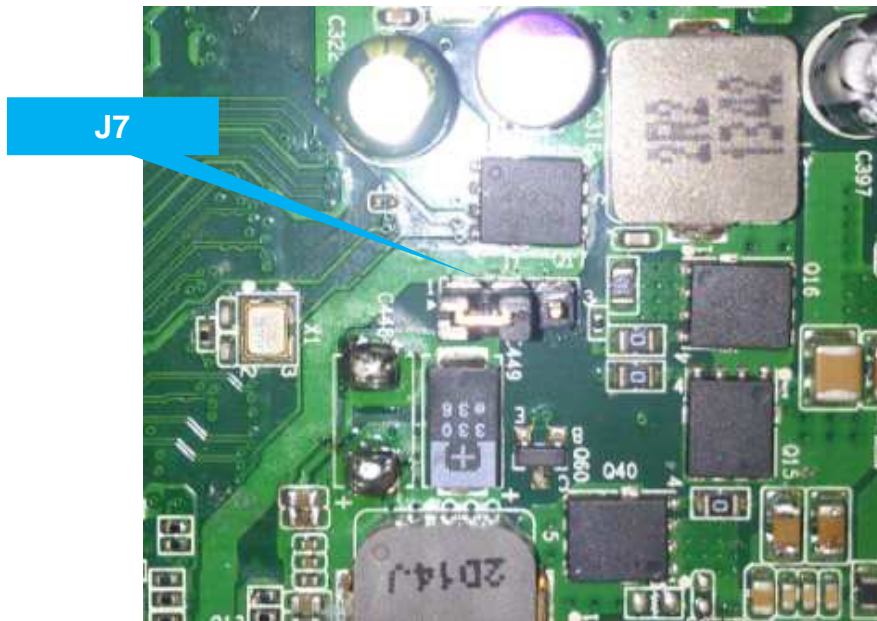

**Normal 1-2 (Default)  
CMOS clear 2-3**

**Deep Sleep (J26)**

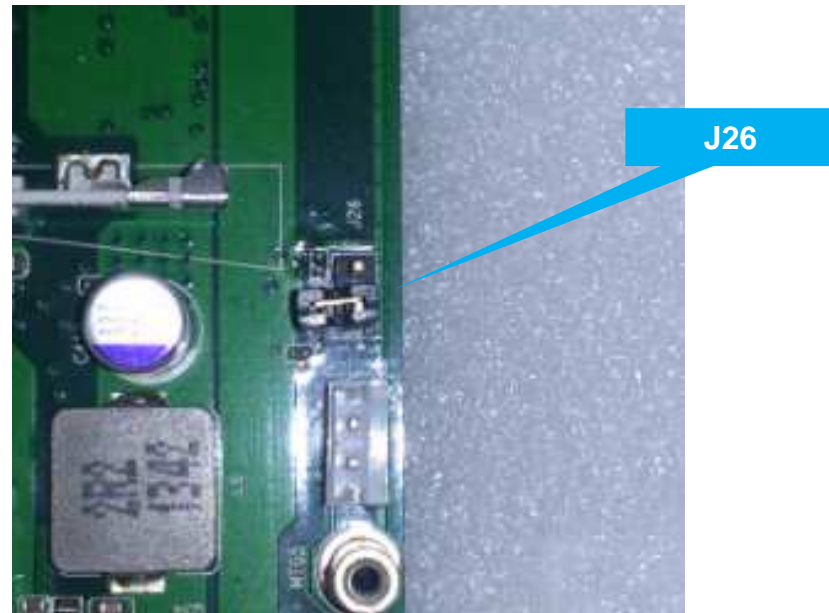

**Normal 1-X (Default)  
Deep Sleep enable 1-2**

The MITAC logo is positioned on the left side of the image, partially submerged in water. It features the word "MITAC" in a bold, blue, sans-serif font. A small red circle with a white horizontal line through it is placed above the letter "I".

**MITAC**

**Thanks**

*the best regional partners*

THANKS